

INSTALLING FOR 3" X 4" DOWN SPOUTS


It is easiest to install at the elbow on down spouts that are not too high. When the downspout is high it will have to be cut. Make sure the final cut leaves the rain barrel including the stand it sits on a minimum 12 inches lower than the installed Diverter.

Step 1 - Separate the elbow from the downspout or cut the downspout to the desired length.

Step 2 - Lay the template at the topside of the downspout and mark it out, do the same on the opposite side and cut the marked out portion. It should look like the bottom portion of the picture.



Installed by
a happy customer!

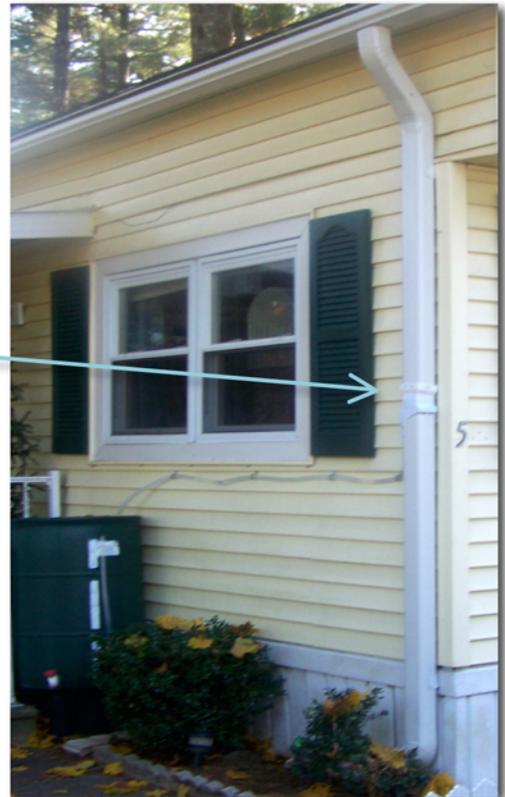

Step 3 - Add the adapter to the Diverter and the Diverter to the bottom portion of the downspout.

Step 4 - Connect it to the elbow or upper portion of the downspout.

Step 5 - Replace the holding clamps